

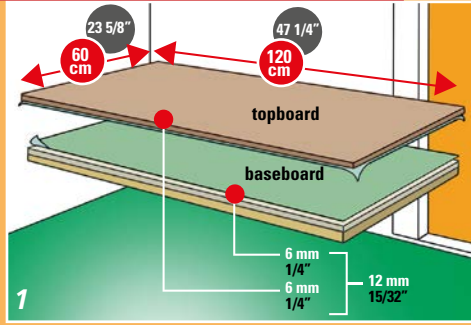
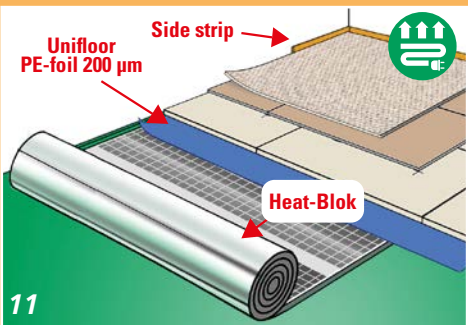
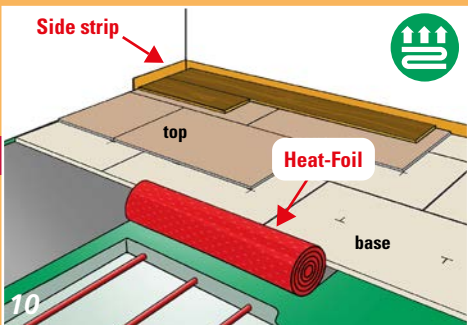
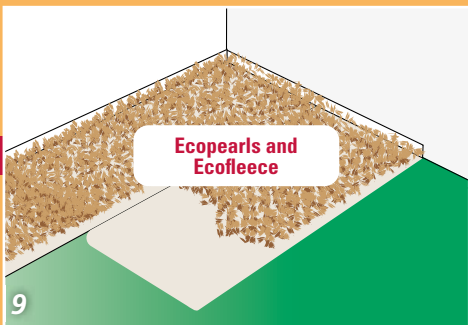
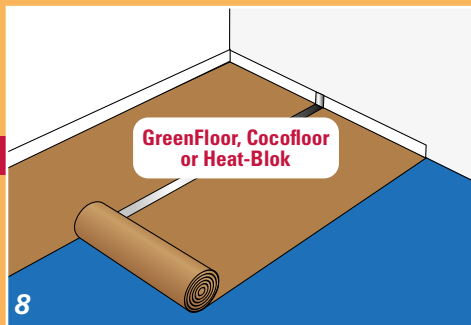
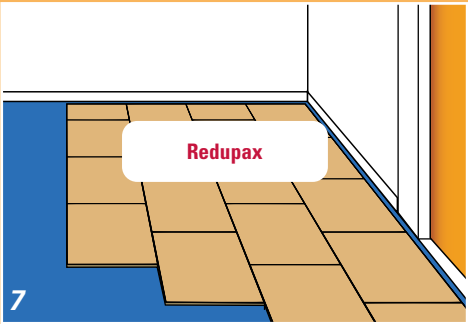
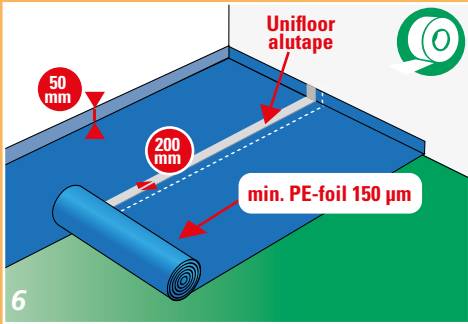
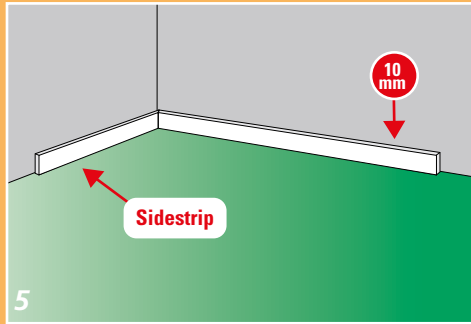
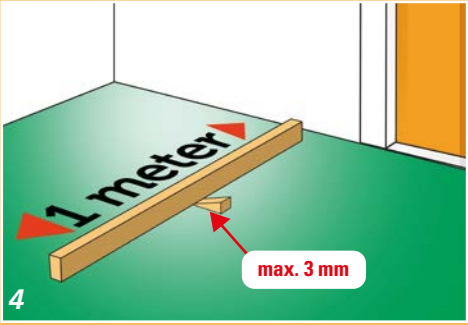


FITTING INSTRUCTIONS

FLOOR PREPARATION

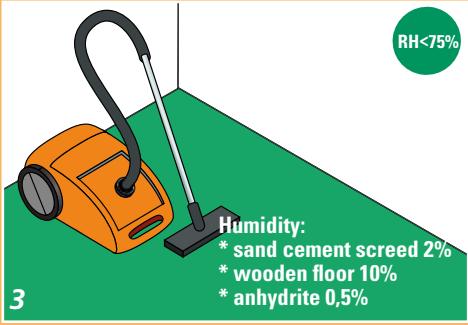

ACCLIMATIZE 24 HOURS IN ADVANCE

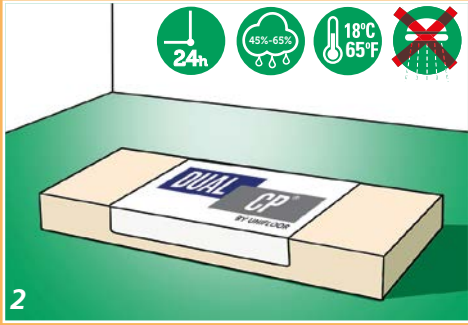












OR

OR

OR

OR

FITTING INSTRUCTIONS

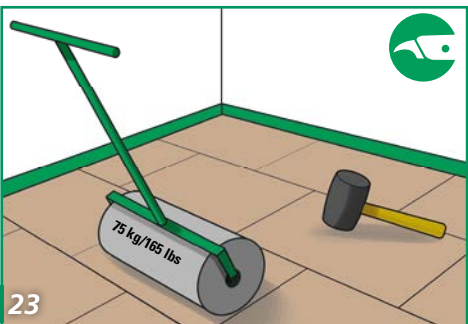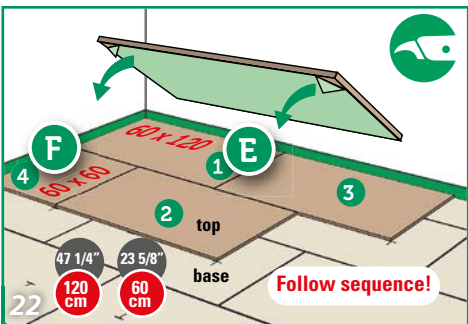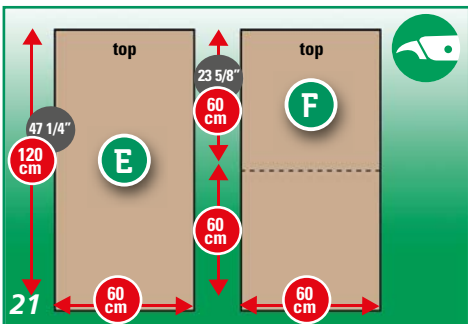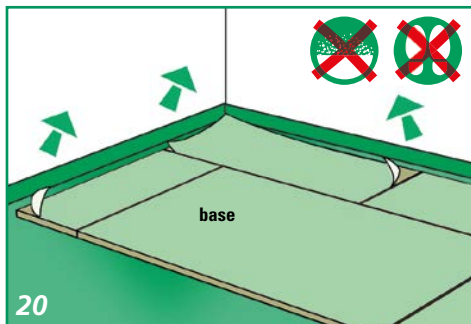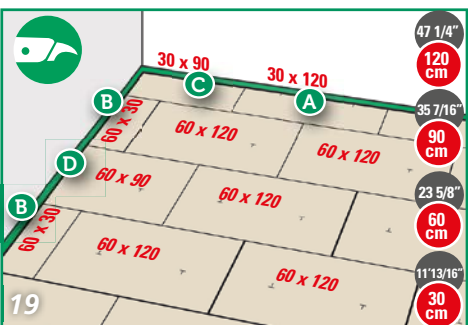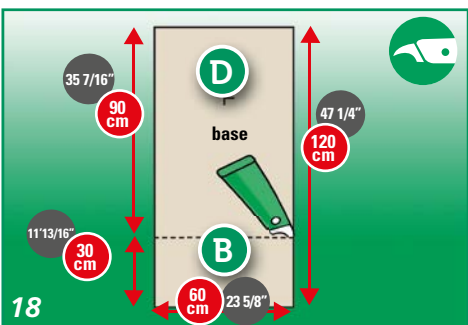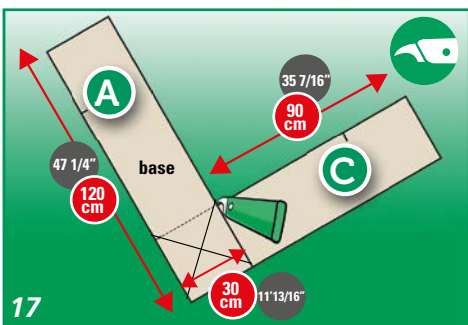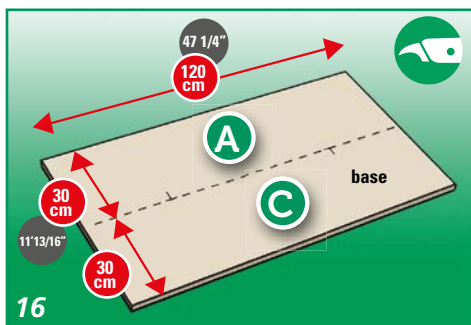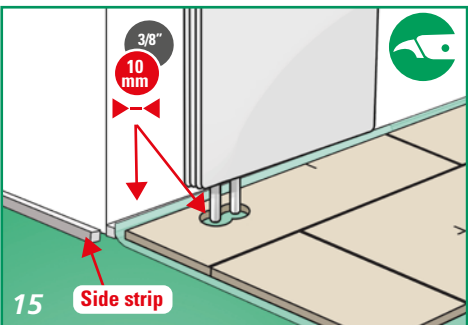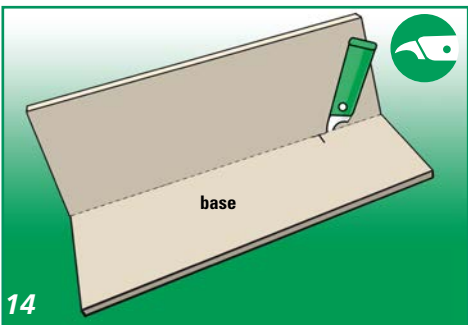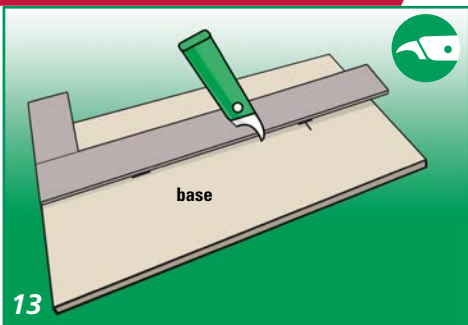

FINISHING

